 


Wireless Controller for use with Nintendo Switch™ (#70221) Firmware Update Instructions

IMPORTANT: Make sure the controller is fully charged before proceeding with this update.

 
Step 1: Download the firmware update file by going to www.verbatim.com/support. Under “What Verbatim product do you need help with?” select “Gaming.” Under “Gaming,” click the “+” sign next to “Nintendo Switch™ Accessories” and select “Nintendo Switch™ Controllers.” Click the file labeled “Firmware Upgrade – Wireless Controller for use with Nintendo Switch™ – Black” to start the file download. Once the file is downloaded, open your “Downloads” folder and double click the file.

Step 2: Run the update file. The below screen will appear (the “Update Firmware” button will be greyed out):

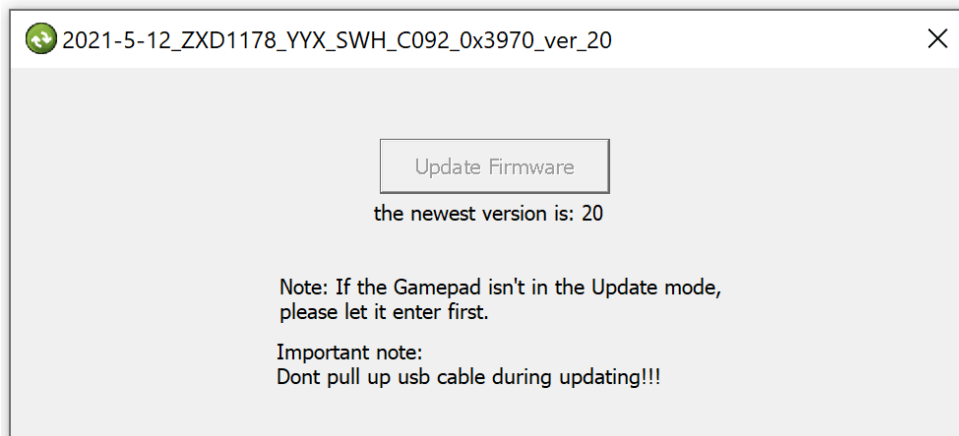


Step 3: Plug the included USB-A to microUSB cable into the controller. Push down on the LEFT joystick and hold.

Step 4: While holding down the joystick, plug the cable into your computer. Once the controller is successfully connected, the “Update Firmware” button will become clickable (example shown below):

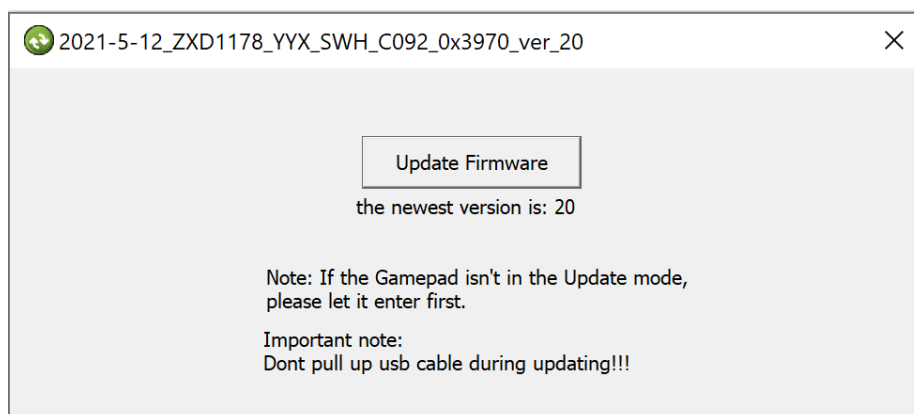

 Step 5: While continuing to hold the joystick down, click “Update Firmware.” Once the update is complete, the pop-up message “Update Success!” will appear (example shown below). You can now release the joystick and disconnect the controller from the computer.

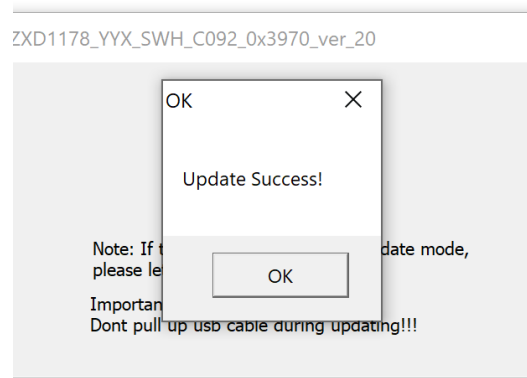

Step 6: Your controller has now been updated and is ready for use!